


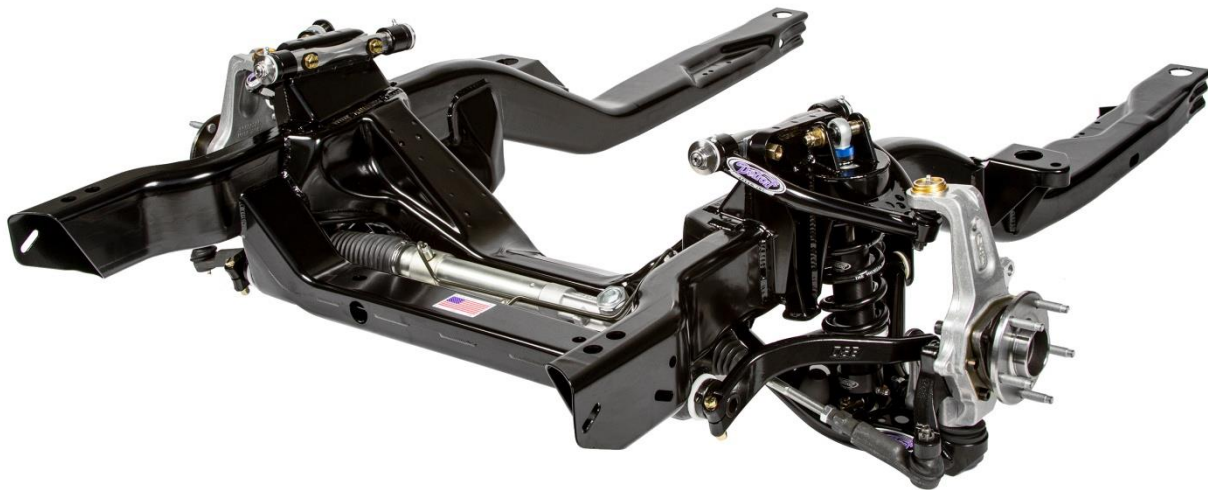

Detroit Speed, Inc.
Hydroformed Front Subframe
1967-1969 Camaro/Firebird & 1968-1974 Nova
P/N: 032001, 032002, 032004, 032005, 032007, 032008, 032017, 032018, 032021



INTRODUCTION

Congratulations on your purchase of a hydroformed front subframe from Detroit Speed, Inc. This all new front subframe is a bolt in replacement for the original stock front subframe and greatly improves handling and ride quality by utilizing Detroit Speed's unique suspension geometry. It is the only front subframe in the aftermarket industry with hydroformed frame rails. The hydroformed frame rails feature high strength and stiffness, decreased weight, and precise quality and repeatability. Hydroforming preserves the steel's strength and stiffness because it is performed at low temperature, unlike traditional high temperature processes which decrease material strength.

The Detroit Speed front subframe has been designed, engineered, and developed for the road and track. This front subframe blends the benefits of current OEM technology and aftermarket performance into one product.

The Detroit Speed front subframe has the following features:

- Hydroformed framersails and stamped cross members
- Optimized suspension and steering geometry
- Ability to accommodate small and big block Chevrolet engines as well as LS1, LS2, and LS7 engines
- Fits within stock inner fenders on a 1969 Camaro without modifications. 1967-1968 Camaros may require modifications to the inner fenders.
- Aluminum body coilover shocks with "Detroit Tuned" valving
- Splined Anti-Roll bar
- Power rack and pinion steering

| Specifications-Detroit Speed Front Subframe | |
|---|---------------|
| Total Suspension Travel | 6" |
| Ride Height* | 2.9" ± 1.0" |
| Static Camber | - 0.5° ± 0.2° |
| Static Caster | +7.5° ± 0.5° |
| Static Toe | 0.0° ± 0.1° |
| *Measured from the top of the framerrail to the center of the hub | |

| Engine Fitment-Detroit Speed Front Subframe | | | | |
|---|---|--|--|---|
| SBC/BBC Engines | | | | |
| Engine | Mounting | Oil Pans | Headers | Comments |
| Small Block Chevrolet | Stock type mounts and brackets | Stock Or Aftermarket | Patriot: P/N: H8056 (mid-length) P/N: H8047 (full-length) Hooker Headers: P/N: 2131 (1 ¾" full-length) Lemon's Headers: SBPT-202 | |
| Big Block Chevrolet | Stock type mounts and brackets | GM P/N: 12495360 (one-piece rear main seal) | Patriot: P/N: H8012 (mid-length) Doug's Header's" P/N: D313R (full-length) Lemons Headers: P/N: BBPT-660 | |
| LS Engines | | | | |
| Engine | Engine Mounting Kits/Engine Oil Pan Usage | | Headers | Comments |
| LS1*, LS2* & LS3* | Detroit Speed P/N: 060401 (Positions engine in a stock position) Oil Pan: Stock GM 4 th Gen F-body P/N: 12628771, Champ P/N: LS1000, Mast Motorsports P/N: 401-111 or Holley P/N: 302-2 or Detroit Speed P/N: 060404 (Moves engine rearward from stock 1.5") Oil Pan: Stock GM LS1, LS2, or LS3, Corvette GM P/N: 12624617 or Mast P/N: 401-111 or Holley P/N: 302-2 | | Detroit Speed P/N: 061001 (Requires use of Detroit Speed Engine Mount Kit P/N: 060404) | A/C compressor will fit in stock 4 th Gen F-body mounting location. |
| LS7* & LS9 | Detroit Speed P/N: 060401 (Positions engine in a stock position) Oil Pan: Stock GM Oil Pan NOTE: Use GM P/N: 25534412 or Peterson Fluid Systems for dry sump fittings to drain oil pan or Detroit Speed P/N: 060404 (Moves engine rearward from stock 1.5") Stock GM Oil Pan, Corvette Dry Sump Pan GM P/N: 12626225 | | Detroit Speed P/N: 061001 (Requires use of Detroit Speed Engine Mount Kit P/N: 060404) | A/C compressor will fit in stock 4 th Gen F-body mounting location. Needs to use Camaro style balancer/pulley. |

***NOTE: For aftermarket LS engines (i.e. Mast Motorsports), refer to manufacturer for specific oil pan usage and use chart above for correct Detroit Speed Engine Mounting Kit.**

| Accessory Components-Detroit Speed Front Subframe | |
|---|---|
| Brakes | Detroit Speed has Baer brake packages for our front frame. Any C6 Corvette brake application will work with our front frame. |
| Body Mounts | Detroit Speed stock height or half height body mounts or any stock type body mount. |
| Subframe Connectors | Most connectors available for the stock subframe will fit |
| Rack & Pinion Fittings | Return (low): 5/8" - 18 - Pressure (high): 9/16" - 18 Fittings to adapt to -6 AN and complete hose kits are available from Detroit Speed |
| Rack & Pinion Input Shaft | 3/4"-36, Complete kits available from Detroit Speed |
| Transmission Crossmember | Stock or aftermarket cross members designed to fit a stock subframe |
| Z-Bar Bracket | Bolt-on bracket available for stock clutch linkage. See Page 4. |
| Parking Brake Cable | Stock routing and mounting |

Wheel and Tire Fitment

| 1967-68 Camaro/Firebird | | |
|-------------------------|-------------------|------------|
| Wheel Size | Wheel Backspacing | Tire Size |
| 17" x 8.0" * | 5.125" | 245/45ZR17 |
| 18" x 8.0" | 5.125" | 245/40ZR18 |
| 18" x 8.5" | 5.625" | 245/40ZR18 |
| 18" x 9.0" | 6.125" | 255/35ZR18 |
| 18" x 9.5" | Not Recommended | |
| 18" x 10.0" | Not Recommended | |

| 1969 Camaro/Firebird | | |
|----------------------|-------------------|------------|
| Wheel Size | Wheel Backspacing | Tire Size |
| 17" x 8.0" * | 4.875" | 245/45ZR17 |
| 18" x 8.0" | 4.875" | 245/40ZR18 |
| 18" x 8.5" | 5.125" | 245/40ZR18 |
| 18" x 9.0" | 5.375" | 255/35ZR18 |
| 18" x 9.5" | 5.875" | 255/35ZR18 |
| 18" x 10.0" | 6.125" | 275/35ZR18 |

| 1968-74 Nova | | |
|--------------|-------------------|------------|
| Wheel Size | Wheel Backspacing | Tire Size |
| 17" x 8.0" * | 5.125" | 245/45ZR17 |
| 18" x 8.0" | 5.125" | 245/40ZR18 |
| 18" x 8.5" | 5.625" | 245/40ZR18 |
| 18" x 9.0" | 6.125" | 255/35ZR18 |
| 18" x 9.5" | Not Recommended | |
| 18" x 10.0" | Not Recommended | |

* 17" wheels require a minimum inside wheel diameter of 16.250"

Caution: Some brake applications will not work with 17" wheels. Flush mount valve stems may also be required on wheels with a behind center valve stem location.

| Hardware Checklist - Detroit Speed Front Subframe | | | |
|---|---|----------|-------|
| Part Number | Description | Quantity | Check |
| 9903020 | Rack & Pinion Hardware Bag | 1 | |
| 980033FS | 9/16"-18 x 5-1/2"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 2 | |
| 970020FS | 9/16" SAE Flat Washer, Yellow Zinc | 2 | |
| 99090041 | Rack & Pinion Spacer, Aluminum | 2 | |
| 9303021 | Anti-Roll Bar Hardware Box (5x5x5) | 1 | |
| 950059FS | 3/8"-24 x 2-1/2"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 2 | |
| 960032FS | 3/8" Nylon Insert Locknut, Grade 8, Yellow Zinc | 2 | |
| 970035FS | 3/8" AN Flat Washer, Yellow Zinc | 4 | |
| 960034FS | M12-1.75 Hex Jam Nut, Clear Zinc | 2 | |
| 960036FS | M12-1.75 Nylon Insert Locknut, Clear Zinc | 2 | |
| 970026FS | M12 Flat Washer, Clear Zinc | 4 | |
| 99030106 | Anti-Roll Bar End Link-C6 (GM P/N: 15288535) | 2 | |
| 9303073 | 1-1/4" Double Split Lock Collar, Steel, Black Zinc | 2 | |
| 9303022 | Lower Control Arm Hardware Bag | 1 | |
| 980019FS | 9/16"-18 x 3-1/2"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 2 | |
| 980034FS | 9/16"-18 x 3-3/4"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 2 | |
| 960022FS | 9/16"-18 Nylon Insert Locknut, Grade 8, Yellow Zinc | 4 | |
| 970020FS | 9/16" SAE Flat Washer, Yellow Zinc | 8 | |

| | | | |
|----------------|--|----------|--|
| 9303023 | Upper Control Arm Hardware Bag | 1 | |
| 980026FS | 1/2"-20 x 2-1/2"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 4 | |
| 960031FFS | Upper Control Arm Cross Shaft Mount Nut, Yellow Zinc | 4 | |
| 970019FS | 1/2" AN Flat Washer, Yellow Zinc | 8 | |
| 920009FS | 1/8" Thick, 1/2" Slot, 1 1/8" x 1 1/8" Shim, Bright Zinc | 8 | |
| | | | |
| 9303024 | Shock Hardware Bag | 1 | |
| 980021FS | 1/2"-20 x 3-1/2"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 2 | |
| 960004FS | 1/2"-20 Nylon Insert Locknut, Grade 8, Yellow Zinc | 2 | |
| 970037FS | 1/2" SAE Flat Washer, Yellow Zinc | 2 | |
| 980035FS | 3/8"-24 x 1-1/4"L Hex Head Cap Screw, Grade 8, Yellow Zinc | 4 | |
| 960032FS | 3/8"-24 Nylon Insert Locknut, Grade 8, Yellow Zinc | 4 | |
| 970023FS | 3/8" SAE Flat Washer, Yellow Zinc | 4 | |
| 99030021F | 3/8" OD, 1/2" ID, x 7/8"L Steel Bushing, Electroplate | 2 | |
| 031060 | Detroit Speed/JRi Spanner Tool | 1 | |
| 031062 | Torrington Bearing Set (2-Thrust Bearing, 4-Thrust Washer) | 1 | |
| | | | |
| 9303025 | Bump Stop, Upper Control Arm Hardware Bag | 1 | |
| 960033FS | 5/16"-18 Nylon Insert Locknut, Clear Zinc | 2 | |
| 970027FS | 5/16" SAE Flat Washer, Grade 5, Clear Zinc | 2 | |
| 99030060 | 5/16"-18 x 5/8" Bump Stop - 3/4" x 1-3/4" x 1-3/8" | 2 | |
| | | | |
| 9303026 | C6 Upright Hardware Bag (With GM Uprights Only) | 1 | |
| 960036FS | M12-1.75 Nylon Insert Locknut, Clear Zinc | 2 | |
| 970026FS | M12 Flat Washer, Clear Zinc | 2 | |

| Fastener Torque Specifications – Detroit Speed Front Subframe | | |
|---|----------------------------------|------------------|
| Application | Torque (ft-lb) | Threads |
| Lower Control Arm Mounting Bolts | 95 | |
| Rack and Pinion Mounting Bolts | 95 | Anti-Seize |
| Anti-Roll Bar Shaft Clamp Screw | 14 | Blue Loctite 242 |
| Anti-Roll Bar Link Nuts | 40 on top nut – 45 on bottom nut | Red Loctite 262 |
| Upper Control Arm Cross-shaft Mounting Bolts | 75 | Red Loctite 262 |
| Upper Coilover Shock Mounting Bolts | 60 | Anti-Seize |
| Lower Coilover Shock Tie Bar Bolts | 35 | |
| Anti-roll Bar Arm Mounting Bolt | 25 | |
| Tie Rod End Jam Nut | 45 | Anti-Seize |
| Upper Control Arm Ball Joint Stud Nut* | 40 | |
| Lower Control Arm Ball Joint Stud Nut* | 20 then turn an additional 180° | Red Loctite 262 |
| Tie Rod End Stud Nut* | 35 | Anti-Seize |
| Wheel/Hub Bearing Mounting Bolts | 95 | Red Loctite 262 |
| Steer Arm Mounting Bolts | 60 | Red Loctite 262 |
| Body Mount Bolts | 90 | |
| Radiator Support Mount Bolts | 35 | |
| Front Brake Caliper Mounting Bracket Bolts | 125 | |
| Wheel Stud Nuts | 100 | |
| *Always tighten slotted nuts to line up with the cotter pin hole when applicable. | | |

IMPORTANT:

1. If you have purchased the bare metal, unassembled option for the Detroit Speed Hydroformed Subframe, the upper and lower control arms **CAN NOT** be powder coated since they come already assembled from Detroit Speed. The temperatures from this process will destroy the control arms beyond repair.

The Detroit Speed upper control arms **CAN NOT** be taken apart because of the precise assembly procedure at Detroit Speed. The upper control arm cross shaft nuts are torqued and then pinned in place. Failure to follow the correct procedure will damage the upper control arms beyond repair. Any attempt at taking apart any of the Detroit Speed subframe components before calling Detroit Speed will void any warranty. If you have any questions please call Detroit Speed at 704-662-3272.

2. If the lower control arm ball joint stud needs to be serviced after the initial torque setting listed above for a coilover spring change, etc. use the following information to re-assemble the lower control arm and upright:
 - a) Before you remove the ball joint nut, make a line with a marker from the top of the nut down to the upright and then loosen the ball joint nut.
 - b) Upon re-assembly, torque the ball joint nut to 20 ft-lbs. and then tighten the nut until the line on the nut goes back to the line on the upright so it is back in the same location as the initial torque setting.
3. If the upper ball joint needs to be replaced, the upright assembly must be returned to Detroit Speed to be serviced. Failure to follow this procedure before calling Detroit Speed will void any warranty. If you have any questions please call Detroit Speed at 704-662-3272.

CAUTION:

The Detroit Speed serial number tag is the best identification record of your subframe when contacting Detroit Speed to determine when your subframe was assembled for any warranty issues should you need them. See Figure 1. For customers that have ordered the raw subframe we recommend not powder coating the frame as that will cause permanent damage to your serial tag number. If it is damaged it would be much more difficult to properly ID your Detroit Speed subframe.



Figure 1 – Subframe Tag

Detroit Speed Bolt-on Z-bar Bracket (P/N: 032104): If you purchased the Bolt-on Z-bar Bracket, Detroit Speed has a bracket for this application. The Bolt-on Z-bar Bracket provides a simple and effective way of mounting a bracket to the front frame for the factory Z-bar bracket.

1. Pilot holes for the Bolt on Z-bar Bracket are located in the frame rails. The appropriate holes in the front frame must be drilled larger to be tapped. These holes are shown in Figure 2.

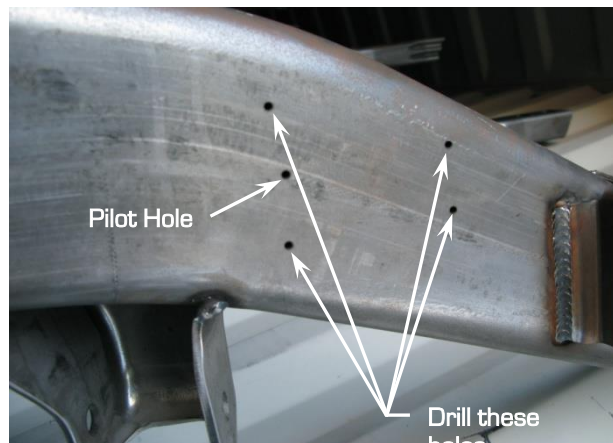


Figure 2 - Locating the Holes to be Drilled

2. Drill the holes out using a “J” drill bit. Using the appropriate tools, tap the drilled holes to 5/16” - 24.
3. Before bolting the Detroit Speed Bolt-on Z-bar Bracket to the front frame, attach the factory Z-bar support. Use the provided hardware to attach the Z-bar Bracket to the front frame.

NOTE: Be sure the frame rails are free of any loose media or particles that may have collected in the rails from paint or powdercoat. Do this with compressed air. Pay particular attention to the front crossmember. Any foreign particles left in the front crossmember could possibly damage the Anti-roll bar end support bushings.

1. Install lower control arm assemblies.

- a) Locate the correct lower control arm (driver or passenger side). This is referenced by the bump stop located on the forward leg of the front frame. See Figure 3.

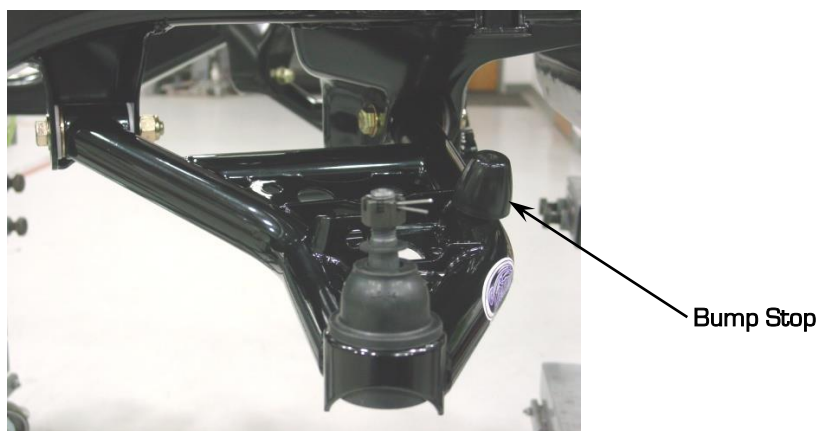


Figure 3 - Passenger Side Control Arm Shown

- b) Be sure to use the correct 9/16”-18 bolts to mount the lower control arms. The short bolt (9/16”-18 x 3-1/2L”) is used in the forward leg of the control arm and the long bolt (9/16”-18 x 3-3/4”L) is used in the rear leg of the control arm. Both bolts must point forward (i.e. bolt head toward the rear) or the bolts and the control arm will not be able to be removed once the front frame is fully assembled. Using the provided 9/16”-18 Nylock nuts and washers, torque the lower control arm bolts to 95 ft-lbs.

2. Install the upper control arm assemblies.

- a) When installing the upper control arms, be sure to distinguish between the driver and passenger side upper control arms. See Figure 4a. Install the provided 1/2" AN flat washers on both the head and nut side of the 1/2"-20 x 2-1/2"L bolts. See Figure 4b and 4c.
- b) Apply High Strength Red Loctite 262 to the threads of the bolts before installing the 1/2"-20 upper control arm cross-shaft nuts.
- c) Once the cross-shaft nuts have been installed loosely, insert one 1/8" shim on each bolt and torque the bolts to 75 ft-lbs as shown in Figure 4d.



Figure 4a – Driver & Passenger Upper Control Arms

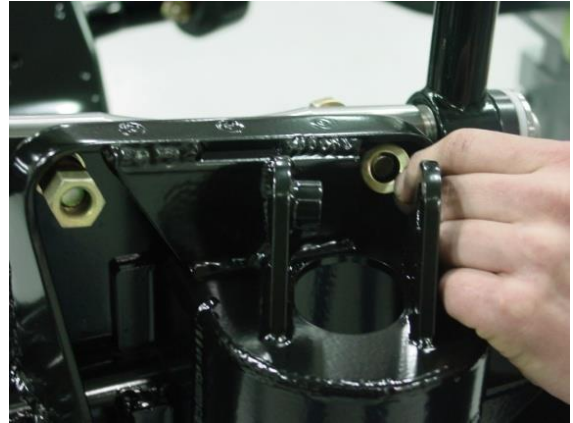


Figure 4b – Installing the Hardware



Figure 4c – Installing the Hardware



Figure 4d – Installed Upper Control Arm

3. Install the bump stops for the upper control arms.

- a) Install the bump stops onto the frame pad located behind the upper coilover mount using the provided 5/16"-18 Nylock nuts and washers and tighten. See Figure 5 on the next page.



Figure 5 - Bump Stop

4. Install each coilover assembly.

- a) Before installing each coilover, it is necessary to build each assembly.

For the *base, non-adjustable shocks* please use the following steps to assemble each coilover shock:

- (1) Assemble the coilover shock by removing the snap ring using a set of snap ring pliers to remove the upper spring seat as seen in Figure 6 on the next page.
- (2) Once the upper spring seat is removed, the coilover adjuster nut must be threaded all the way to the bottom of the threads. Then you can install the Torrington bearing set shown in Figure 7 on the next page onto each shock by installing one thrust washer, followed by the roller bearing and then another thrust washer.



Figure 6 - Removing the Snap Ring

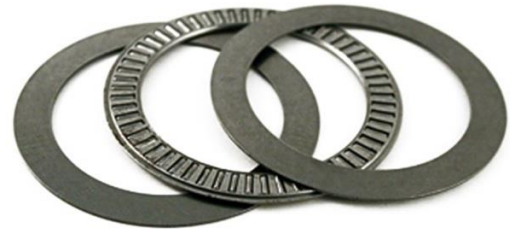


Figure 7 - Torrington Bearing Set

- (3) With the Torrington bearing set in place you can now install the spring over the end of the shock.
- (4) With the spring in place, install the upper spring seat along with the snap ring as seen in Fig. 8.



Figure 8 - Snap Ring Installed

For the *adjustable shocks*, please use the following steps to assemble each coilover shock:

- (1) Remove the upper spring seat from the retaining ring using a rubber hammer and moving it down off the upper shock mount as seen in Figure 9.
- (2) Remove the retaining ring from the upper shock mount and pass the upper spring seat over the upper shock mount as seen in Figure 10.
- (3) Thread the spanner nut all the way to the bottom of the coilover shock and install the Torrington bearing set (See Figure 7 above) on each shock by installing one thrust washer, followed by the roller bearing and then another thrust washer.
- (4) Slide the coilover spring over the top of the upper shock mount.
- (5) Install the upper spring seat back over the top of the upper shock mount and re-install the retaining ring back onto the upper shock mount. Press the upper spring seat up onto the retaining ring so it locks in place.

The coilover assembly is now complete and ready to be installed.



Figure 9 – Removing the Upper Spring Seat



Figure 10 – Upper Spring Seat & Retaining Ring

- b) Make sure the upper mounting holes are clean and free of any paint so the bolts and spacers slide into the mounting tabs.
- c) Slide the provided 1/2"-20 x 3-1/2"L upper shock bolt and 1/2" x 7/8"L spacer through the upper coilover tab. Make sure that the bolt is facing forward (i.e. the bolt head is toward the rear). Install the bolt through the eyelet of the shock so it passes through the welded bushing on the upper coilover tab. Use anti-seize on the threads of the bolt and install the provided 1/2"-20 Nylock nut and washer. See Figure 11.

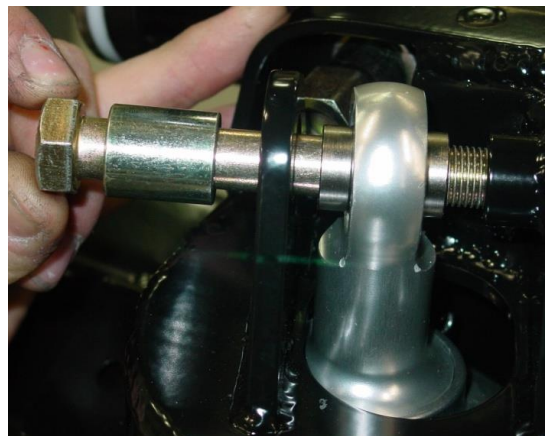


Figure 11 – Upper Shock Bolt and Spacer

- d) Position the lower coilover mount to the lower control arm. Install the two 3/8"-24 x 1-1/4"L lower shock retaining bolts from the top side of the control arm so that the 3/8" Nylock nuts and washers are on the bottom of the lower control arm. See Figure 12 on the next page. **NOTE:** For the double adjustable remote canister shock upgrade, make sure that the canister hose is facing towards the lower ball joint. Failure to do this will cause permanent damage to the canister hose during suspension travel as the lower control arm gusset has been notched in this location for this option. See Figure 13 on the next page.

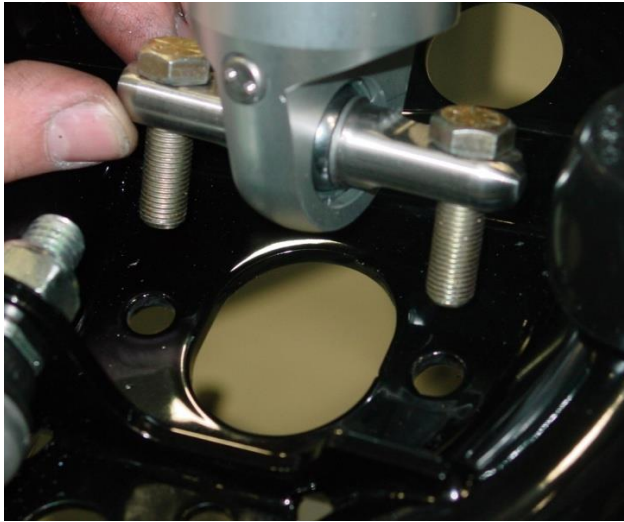


Figure 12 – Lower Shock Retaining Bolts

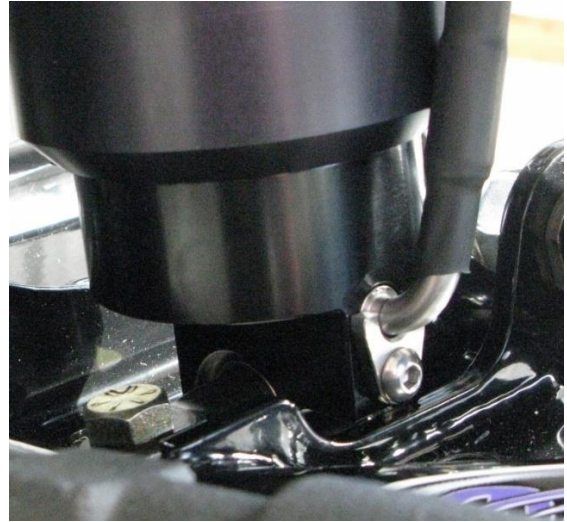


Figure 13 – Remote Canister Shock

- e) Repeat steps b through d to install the opposite side shock and spring assembly. Torque the 1/2"-20 upper shock hardware to 60 ft-lbs. and the 3/8"-24 lower control arm hardware to 35 ft-lbs. Figure 14 shows a completed and installed coilover shock and spring assembly.



Figure 14 – Installed Coilover View (Passenger Side)

5. Install the rack and pinion assembly.

- a) Before the rack and pinion is installed, you can center the rack on the bench before it is installed. Mark a line along the length of the input shaft. Turn the rack all the way to one side and mark the housing where the line on the input shaft lines up. Turn the rack all the way in the other direction and count the turns in the opposite direction. Mark the housing where the line on the input shaft lines up. Turn the rack back in the opposite direction 1/2 the amount of turns so that the line on the input shaft lands in between your 2 marks on the housing (Figure 15 on the next page).



Figure 15 – Center the Rack & Pinion

- b) When installing the rack and pinion, protect the opening in the crossmember to avoid paint chips as it gets very tight in several areas. Install the rack and pinion assembly **from below the crossmember** for better clearance and easier alignment. **NOTE:** Since the rack and pinion fits tight to the crossmember this would be a good time to install your fittings before it is fully installed. You can reference Figure 30 for the location of the pressure and return ports.
- c) Rotate the rack to the rear of the front frame to install in the crossmember. Figure 16 shows the rack in the correct position.

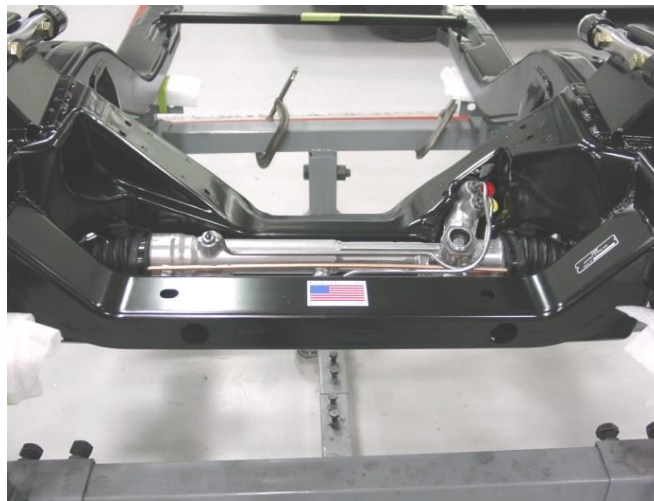


Figure 16 – Positioning the Rack & Pinion

- d) Once the rack is in place, slide the aluminum spacers in place between the rack and the forward crossmember and install the provided 9/16"-18 x 5-1/2"L hex head cap screws with SAE washers (Figure 17). Use anti-seize on the bolts and torque to 95 ft-lbs.



Figure 17 – Attaching the Rack to the Cross Member

6. Install the outer tie rod ends.

- a) Apply anti-seize to the tie rod end threads, then thread the outer tie rod ends onto the rack and pinion.
- b) When installing the tie rod ends, make sure they are equal distance on each side to center the steering. This measurement should be approximately 2-1/4" per side. Measure this from the end of the threads to the outer edge of the nut. (Figure 18).
- c) Torque the tie rod end jam nuts to 45 ft-lbs. and thread the grease fittings into the tie rod ends.

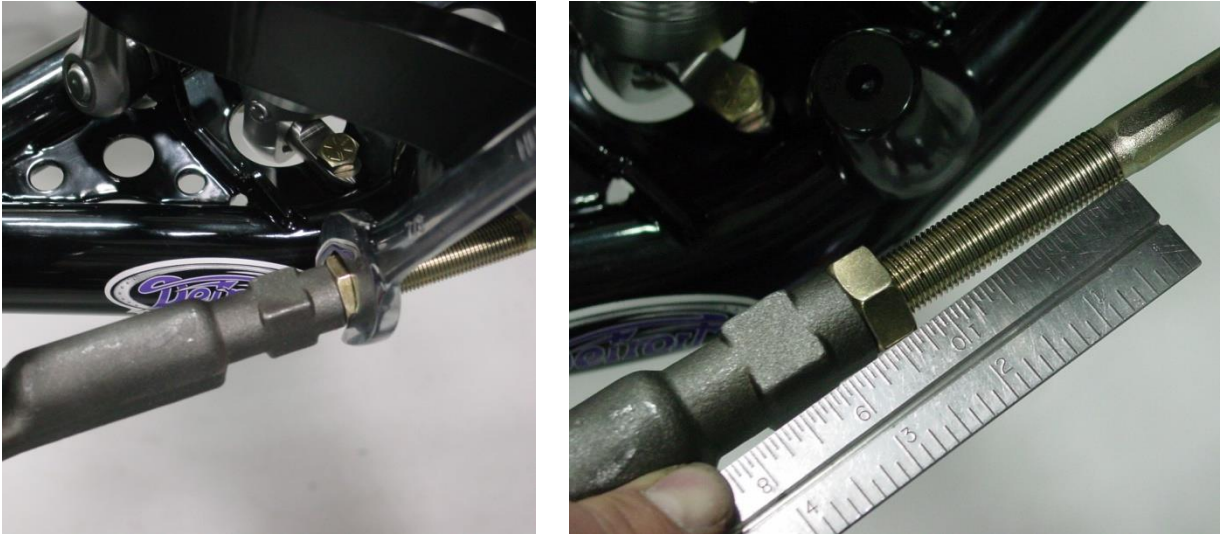


Figure 18 - Measuring the Outer Tie Rods

7. Install the Anti-Roll bar.

- a) Lube the outside of the composite bushings with soapy water. Lube the inside of the bushing, and do your best to fill the interior bushing grooves with chassis grease.
- b) Before sliding the Anti-Roll bar in place, clean the outside of the bar thoroughly with lacquer thinner to remove any foreign materials from the bar.
- c) Once the bar is clean, slide the bar in place. After the bar is in place, install the composite bushings. The bushings may not push in completely by hand. Do not be concerned, as they are designed to be a very precise fit (Figure 19). With the bar and both bushings installed, use a large diameter socket and a rubber hammer to seat the bushings on both sides at this time (Figure 20).



Figure 19 - Installing the Bushing & ARB



Figure 20 - Fully Installing the Bushings

- d) After installing the bar and pushing the bushings in all of the way, center the bar in the crossmember. Measure the portion protruding from the bushings on each side as in Figure 21 on the next page and adjust accordingly until this measurement is the same on both sides. Make sure to reseat the bushings against the frame before measuring, as they can shift when you move the bar and throw off your measurements.

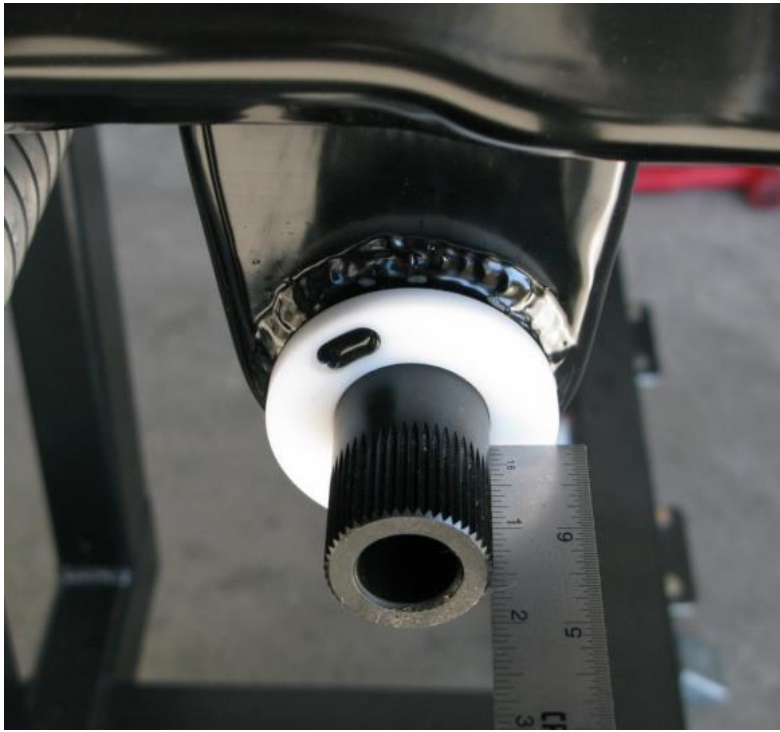


Figure 21 – Measuring the Anti-Roll Bar

- e) Install the provided 1-1/4" Anti-Roll bar shaft clamps next. Loosen both Allen screws in the lock collar. Apply Medium Strength Blue Loctite 242 to the threads and position the clamp onto the Anti-Roll bar. With the heads of the bolts accessible from the bottom, torque the Allen screws to 14 ft-lbs. **NOTE:** Be sure that the groove in the clamp is installed so that it points to the center of the front frame and the size marking is to the outside, and that the two clamps match on either side (Fig. 22).



Figure 22 – Indexing the Clamp

8. Install the Anti-Roll bar arms to the Anti-Roll bar tube.

- a) Make sure both arms are positioned the same on the splines and are even in relation to one another.
- b) When both arms are on the same splines, use the provided 3/8"-24 x 2-1/2"L hex head cap screws and bolt them in place with the 3/8" Nylock nuts and washers. Install the bolts from the top so that the Nylock nuts are on the bottom side of the bar.
- c) Torque the Anti-Roll bar arm 3/8"-24 retaining bolts to 25 ft-lbs. See Figure 23 on the next page.

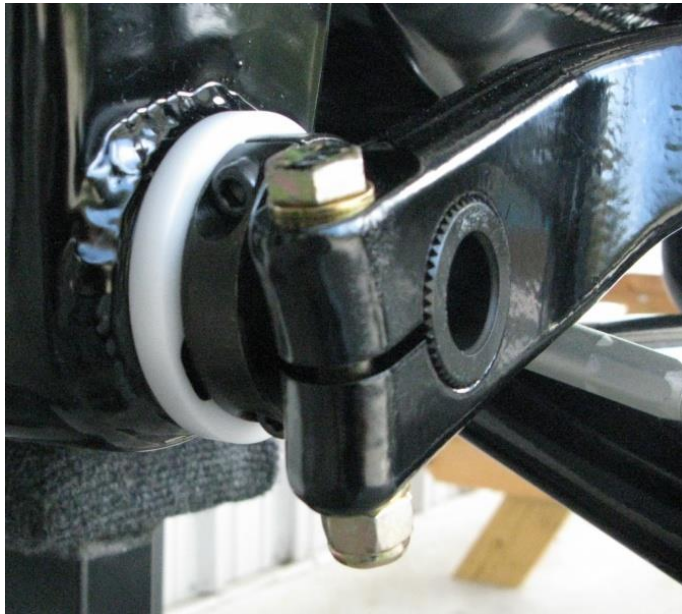


Figure 23 – Attach the Anti-Roll Bar Arm

9. Install the Anti-Roll bar end links to the lower control arms.

- a) These must be installed on the lower control arms now as tightening the links later can be very difficult.
- b) Use the included M12 x 1.75 Nylock nuts and washers. When installing the lower Nylock nut, use High Strength Red Loctite 262 on the threads [Figure 24].



Figure 24 – Attach the End Link to the Lower Control Arm

- c) Repeat the above process for the opposite side and torque the lower Nylock nuts to 45 ft-lbs.

10. Connect the Anti-Roll bar arms to the end links.

- a) Connect the Anti-Roll bar arm to the upper Anti-Roll bar end link on either side. Use High Strength Red Loctite 262 on the threads when installing the provided M12 x 1.75 jam nut and washer and torque to 40 ft-lbs. See Figure 25 on the next page.
- b) Reposition the lower control arm on the side that is being installed last.
- c) Install the upper Anti-Roll bar end link to the Anti-Roll bar arm with the M12 x 1.75 jam nut and washer. Again, use High Strength Red Loctite 262 on the threads and torque to 40 ft-lbs.



Figure 25 – Attach the Anti-Roll Bar Arm to the End Links

NOTE: To install the Detroit Speed spindle assembly (castle nut used on upper ball joint), continue to Step 11. For the GM spindle assembly (Nut and washer used on upper ball joint), skip to Step 12.

11. Install the Detroit Speed spindle assembly.

- a) Clean any grease from the upper and lower ball joint studs and the spindle holes with a clean rag and lacquer thinner.
- b) Install the spindle to the upper control arm first. **NOTE:** Turn and position the stud so the cotter pin locates from front to rear to ease installation.
- c) Tighten the upper ball joint castle nut and torque to 40 ft-lbs. making sure that the slotted nut lines up with the cotter pin hole. Install the cotter pin.
- d) Place the spindle on the lower ball joint. **NOTE:** Turn and position the stud so the cotter pin locates from front to rear to ease installation.
- e) Tighten the lower ball joint castle nut and torque to 20 ft-lbs. plus 180° clockwise making sure that the slotted nut lines up with the cotter pin hole and install the cotter pin. **NOTE: It is critical to follow the torque procedure in the table on page 4 and to use High Strength Red Loctite 262 on the lower ball joint threads.**
- f) Insert the outer tie rod end into the steer arm. **NOTE:** Turn and position the stud so the cotter pin locates from front to rear to ease installation. Torque to 35 ft-lbs. and install the cotter pin (Figure 26). Continue to Step 13.



Figure 26 – Attach the Outer Tie Rod to the Steering Arm

12. Install the GM spindle assembly.

- a) Install the spindle to the upper control arm first.
- b) Torque the upper ball joint washer and nut.
- c) Clean any grease from the lower ball joint stud and the spindle hole with a clean rag and lacquer thinner.
- d) Place the spindle on the lower ball joint. **NOTE:** Turn and position the stud so the cotter pin locates from front to rear to ease installation.
- e) Tighten the lower ball joint nut to the appropriate torque setting and install the cotter pin. **NOTE:** It is critical to follow the torque procedure listed in the table on page 4 and to use High Strength Red Loctite 262 on the lower ball joint threads.
- f) Insert outer tie rod end into the spindle and torque. Install the cotter pin.

13. The front subframe is assembled at this point. Figures 27 and 28 on the next page show a completed installation. Double-check to ensure that all installed components are tight and torqued correctly.



Figure 27 – Fully Assembled View (Driver side, Front)



Figure 28 – Fully Assembled View (Driver side, Rear)

14. Install the front subframe in the vehicle. It is very important that the front subframe be centered in the vehicle.
- Position the vehicle on level and solid ground. Support the vehicle using jack stands at four corners of the body.
 - Locate the lower control arm forward mounting locations and drop a plumb line to the ground and mark the locations.
 - On the rear of the car, locate the round flanged hole in the frame rail that is next to the rear spring pockets. Drop a plumb line from this location on both sides and mark the locations.
 - Measure diagonally from these locations to see if the front subframe is square. The difference between the two measurements should be $1/16$ " or less. If the front subframe is not square, loosen the front subframe mounts and reposition.
15. When installing the front subframe in 1968-1974 Nova applications, it is necessary to use the factory body mount spacers. The spacers install at the forward body mounts and install between the body mounts and the body. The spacers can be seen in Figure 29.



Figure 29 – Nova Body Mount Spacers

16. After the front subframe is installed into the vehicle, the power steering hoses can be attached to the steering gear. Follow Figure 30 for the location of the pressure and return ports.

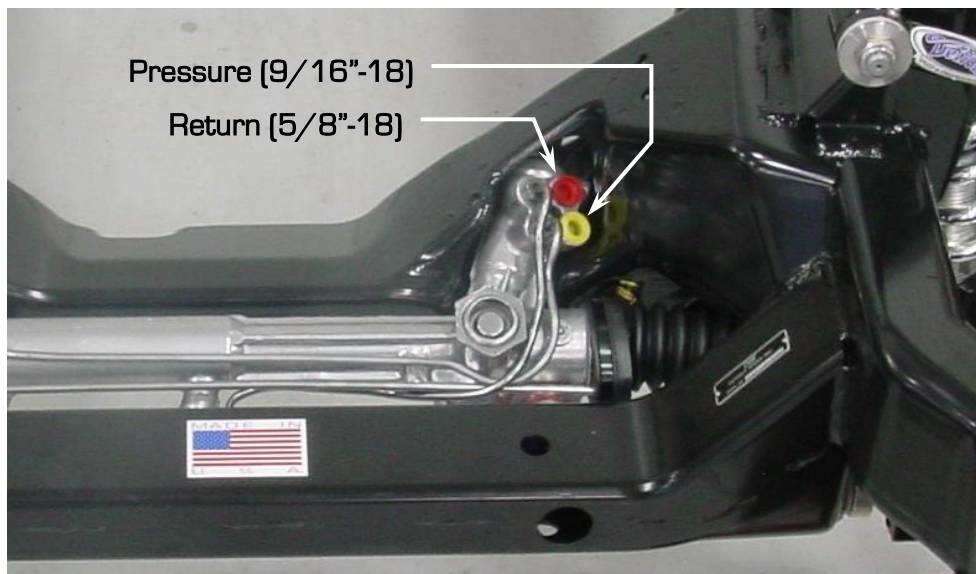


Figure 30 – Location of Pressure and Return Ports

17. The front subframe is now assembled and installed. **NOTE:** Be sure to lubricate all points on the front frame with quality chassis grease. Detroit Speed offers Driven Extreme Pressure chassis grease available as P/N: 140103 if needed.
18. When installing the engine in the front subframe on LS7 applications, the Detroit Speed Hydroformed Front Subframe is designed to accept the stock oil pan and drain plug. However, the design does not allow the drain plug to be functional. To drain the oil from the engine, the hose adapters on the oil pan must be used. The manufacturer and part numbers for the hose adapters are shown in the engine fitment section on page 2. Follow the manufacturer guidelines for the installation of this hose kit.

19. Setting the vehicle ride height.

- a) With the vehicle assembled with all components installed, adjust the vehicle ride height. Before adjusting the ride height, Detroit Speed recommends cleaning the threads of the shock. Once the threads are clean, Detroit Speed recommends applying dry bicycle chain lube to the threads of the shock body before adjusting the spanner nut and compressing the coilover spring. Allow the chain lube to dry before adjusting the spanner nut. If you have the non-adjustable shocks, the spanner nut has a soft tip set screw that will need to be tightened before the vehicle is driven.
- b) Detroit Speed does include a Spanner Tool (P/N: 031060) to adjust ride height however if you have the adjustable coilover shocks, Detroit Speed does offer an Adjustment Tool available as P/N: 031061 if needed. A photo can be seen in Figure 31.



Figure 31 – Detroit Speed Spanner & Adjustment Tools

- 20.** If the Single Adjustable, Double Adjustable, or the Double Adjustable Remote Canister Coilovers were purchased as an upgrade, refer to the following information for adjustment procedures.



Thank you for your recent purchase from JRi Shocks. Your shocks were hand-assembled in Mooresville, NC by one of our experienced technicians using only the highest quality components.

Terms and Conditions of Sale

The JRi Shocks Terms and Conditions of Sale control the purchase of this item and can be reviewed at www.jrishocks.com/terms

Limited 1-Year Warranty

Your product comes with a Limited 1-Year Warranty. In order to be eligible for service under this warranty you **MUST** complete the online warranty registration at www.jrishocks.com/warrantyreg within 30 days from the date of purchase.

Detroit Speed Single Adjustable Shock Applications

To change from the recommended “Detroit Tuned” valving, adjustments can be made independently to the rebound setting. The rebound is controlled by the knob at the upper shock mount (Shock is mounted body side down). The knob rotates clockwise (+) to increase the damping and counterclockwise (-) to decrease the damping. Refer to Figure 32a on the next page.




Figure 32a - Detroit Speed Single Adjustable Shock

To return to the Detroit Speed recommended settings, turn the knob clockwise [+] to full damping. Once at full damping, turn counterclockwise [-] to reach the recommended settings. Refer to Figure 32b for the rebound settings.

Rebound (Shaft Knob)..... 15 Open (counterclockwise, -)

Figure 32b - Detroit Speed Recommended Settings

Adjuster Operation

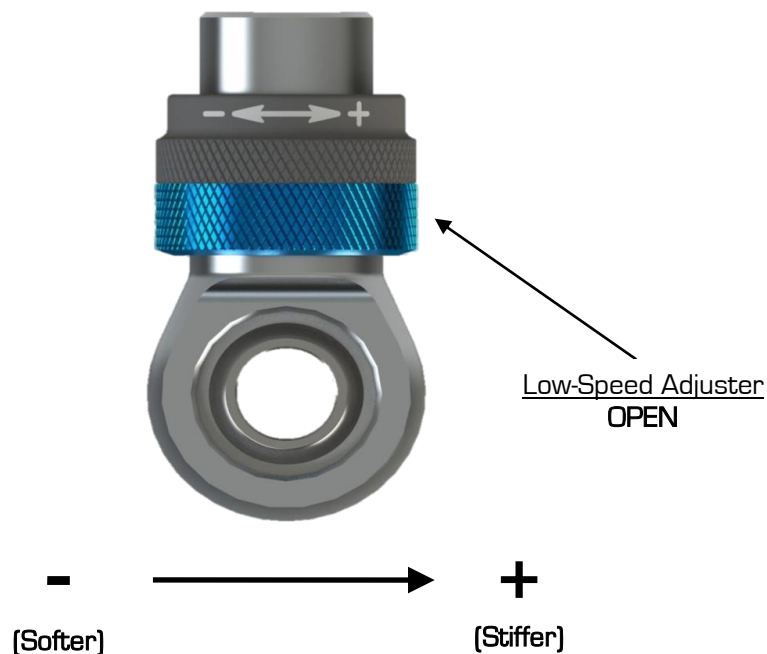

- **Adjuster (60-64 Clicks)**

The low-speed adjuster is a “clicker” style adjuster meaning that its adjustment is measured by detents located inside the blue adjuster knob. There are 16 clicks per 1 revolution of the knob. It uses a right-hand thread in its operation which means as you increase low-speed, the adjuster will move up on the eyelet. The recommended change for an adjustment is 8 clicks at a time. The low-speed adjuster’s reference position is **full stiff** (closed, or all the way up) and referred to -0 (-0 = full stiff, -64 = full soft).

- **Tuning Notes**
 - **Racetrack**
 - For more grip, soften the damping.
 - For increased platform control, stiffen the damping.
 - **Street**
 - For a more comfortable ride, soften the damping

***DO NOT FORCE KNOB WHEN IT STOPS TURNING, YOU MAY DAMAGE THE ADJUSTER AND INTERNAL HARDWARE**

Detroit Speed Double Adjustable Shock Applications

To change from the recommended “Detroit Tuned” valving, adjustments can be made independently to both the high and low speed settings. The rebound is controlled by the sweepers at the upper shock mount. The sweepers rotate clockwise (+) to increase the damping and counterclockwise (-) to decrease the damping. The sweepers can be seen in Figure 33a.



Figure 33a – Detroit Speed Double Adjustable Shock

When adjusting the low speed rebound start at full (+) position, when adjusting the high speed rebound start at full (-) position. To return to the Detroit Speed recommended settings turn the sweeper clockwise(+) to full damping for the low speed setting, and counterclockwise (-) to full damping for the high speed setting. Once at full damping, turn counterclockwise (-) for the low speed setting, and clockwise (+) for the high speed setting to reach the recommended settings. Refer to Figure 33b for recommended settings.

| | |
|-----------------------------------|---------------------------------|
| Low Speed Rebound [Sweeper]..... | 15 sweeps [counterclockwise](-) |
| High Speed Rebound [Sweeper]..... | 4 sweeps[clockwise](+) |

Figure 33b – Detroit Speed Recommended Settings

Detroit Speed Double Adjustable Shocks w/Remote Canisters

To change from the recommended “Detroit Tuned” valving, adjustments can be made independently to both the high and low speed settings. The rebound is controlled by the sweepers at the upper shock mount. The sweepers rotate clockwise (+) to increase the damping and counterclockwise (-) to decrease the damping. Refer to Figure 34a on the next page.

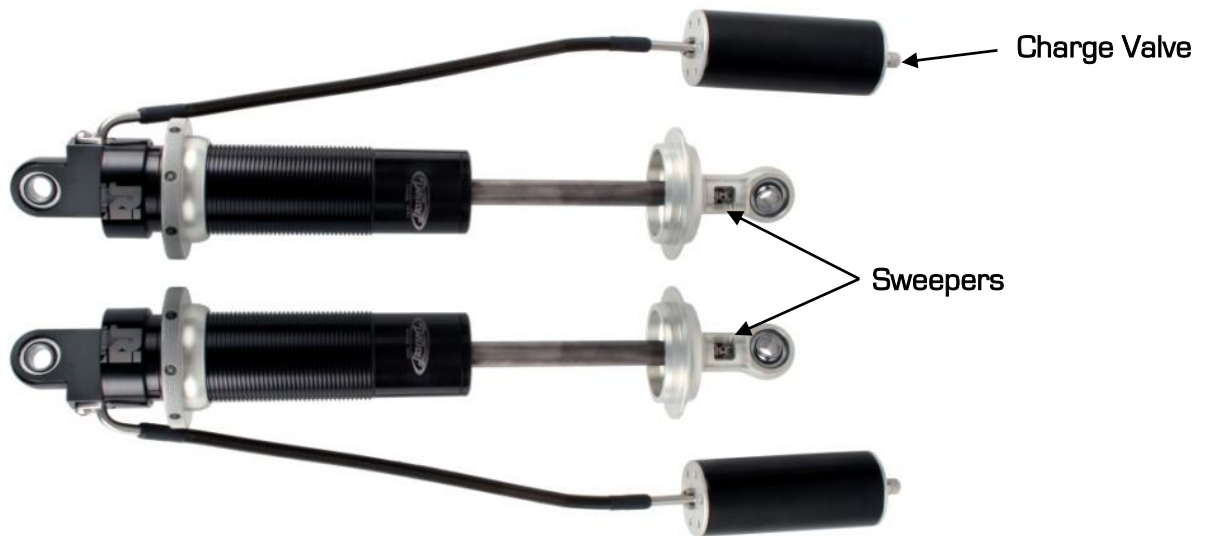



Figure 34a – Detroit Speed Double Adjustable Shock w/Remote Canister

When adjusting the low speed rebound start at full (+) position, when adjusting the high speed rebound start at full (-) position. To return to the Detroit Speed recommended settings turn the sweeper clockwise(+) to full damping for the low speed setting, and counterclockwise (-) to full damping for the high speed setting. Once at full damping, turn counterclockwise (-) for the low speed setting, and clockwise (+) for the high speed setting to reach the recommended settings. Refer to Figure 34b for recommended settings.

| | |
|-----------------------------------|---------------------------------|
| Low Speed Rebound [Sweeper]..... | 15 sweeps [counterclockwise](-) |
| High Speed Rebound [Sweeper]..... | 4 sweeps[clockwise](+) |

Figure 34b – Detroit Speed Recommended Settings

Adjuster Operation

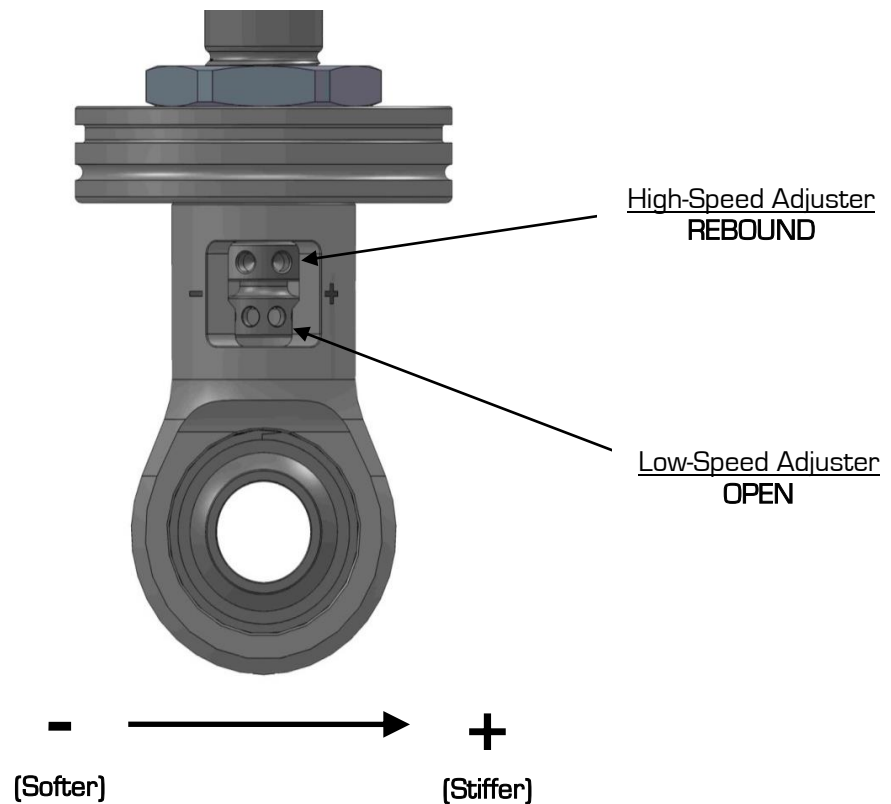

- **High-Speed Adjuster (12 Sweeps)**

The high-speed adjuster is a “sweep” style adjuster meaning that its adjustment is measured by the location of the adjuster in the eyelet window. It uses a left-hand thread in its operation which means; as you increase high-speed, the adjuster will move down in the window*. The high-speed adjuster’s reference position is **full soft** and referred to as +0 (+0 = full soft, +12 = full stiff).

- **Low-Speed Adjuster (25 Clicks)**

The low-speed adjuster is a “clicker” style adjuster meaning that its adjustment is measured by detent grooves located inside the high-speed shaft. It uses a right-hand thread in its operation which means; as you increase low-speed, the adjuster will move up in the window. The low-speed adjuster’s reference position is **full stiff** and referred to -0 (-0 = full stiff, -25 = full soft).

**The low-speed adjustment does not change when adjusting the high-speed.*

To aid in the installation of the reservoirs, we also offer a set of Billet Aluminum Remote Canister Mounts. The canister mounts are available exclusively through Detroit Speed, P/N: 032102. They are shown in Figure 35.



Figure 35 – Billet Aluminum Remote Canister Mounts

20. Have a professional alignment completed following the specifications given in the chart on Page 2.

If you have any questions before or during the installation of this product please contact Detroit Speed at tech@detroitsspeed.com or 704.662.3272

Legal Disclaimer: *Detroit Speed, Inc. is not liable for personal, property, legal, or financial damages from the use or misuse of any product we sell. The purchaser is solely responsible for the safety and performance of these products. No warranty is expressed or implied.*