


Click the links for related parts

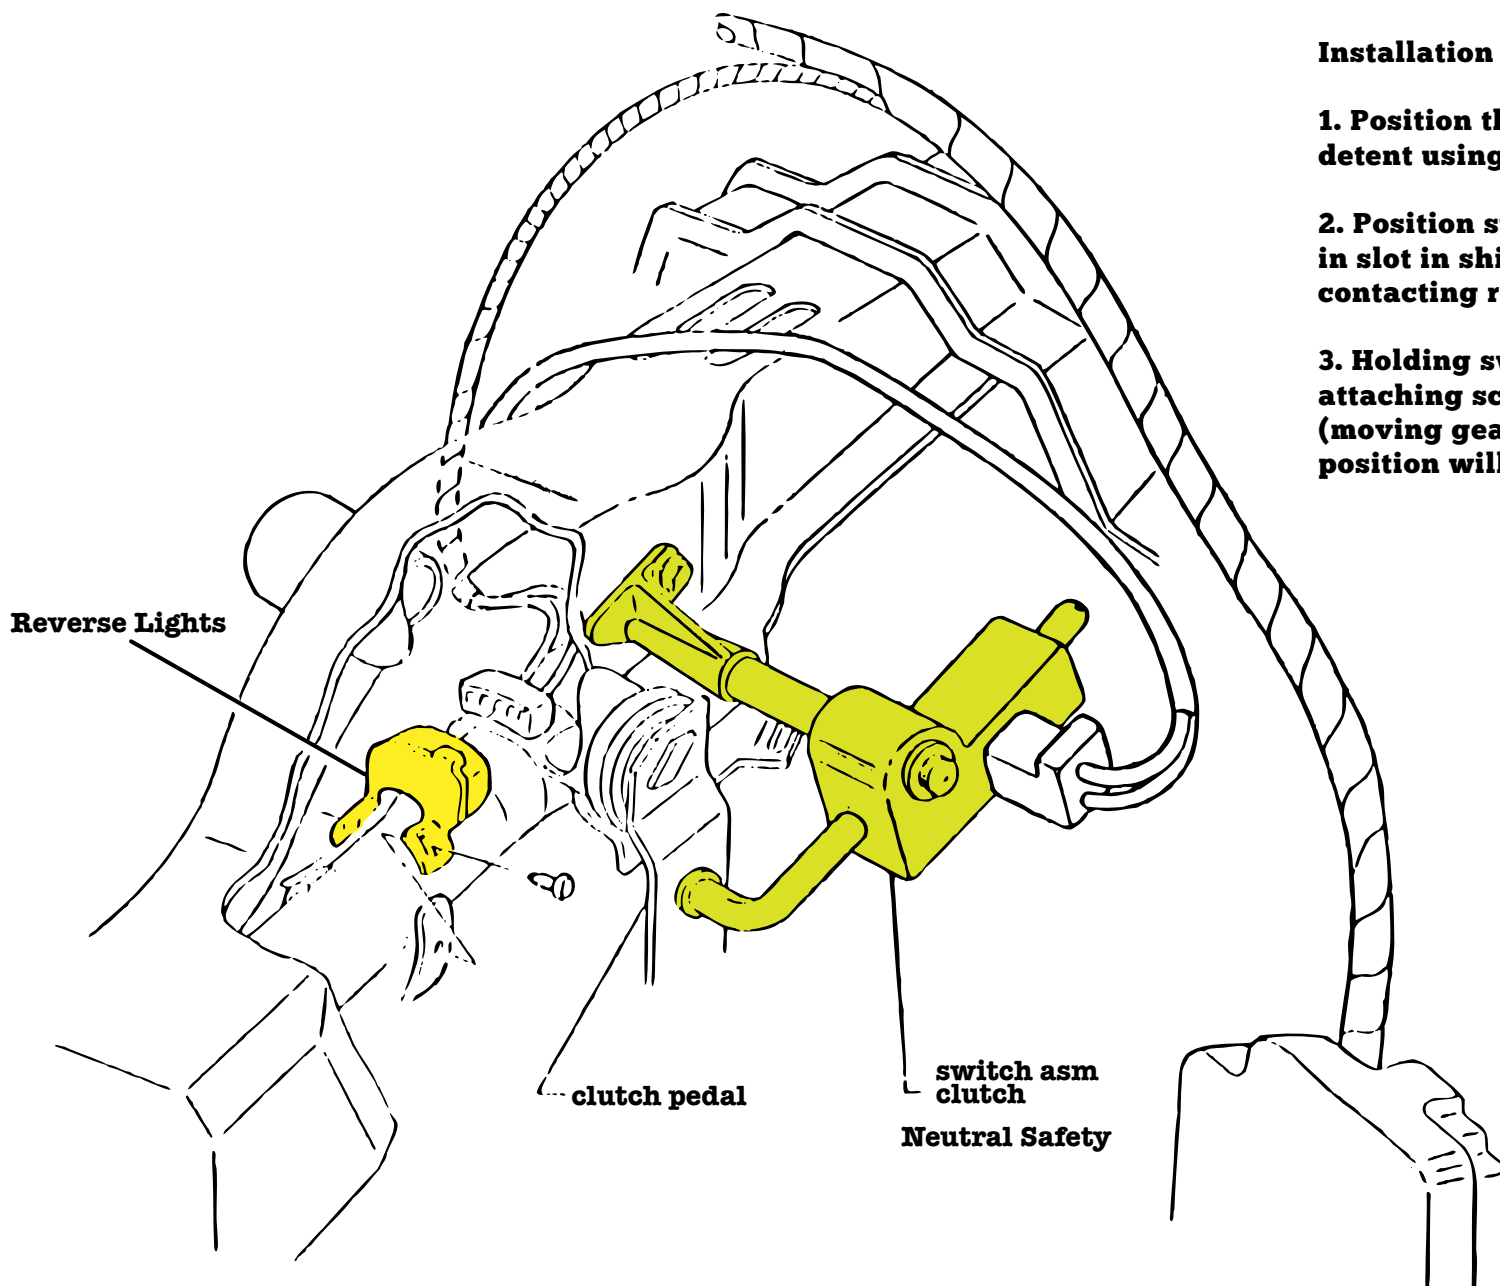

Installation of Reverse Light Switch

- 1. Position the column shift tube in reverse detent using the 1st-Reverse lower shift lever**
- 2. Position switch on column with drive tang in slot in shift tube and right side of tang contacting right surface of shift tube slot.**
- 3. Holding switch in position, install the two attaching screws & torque to specifications. (moving gear selector lever out of reverse position will break shear pin)**