

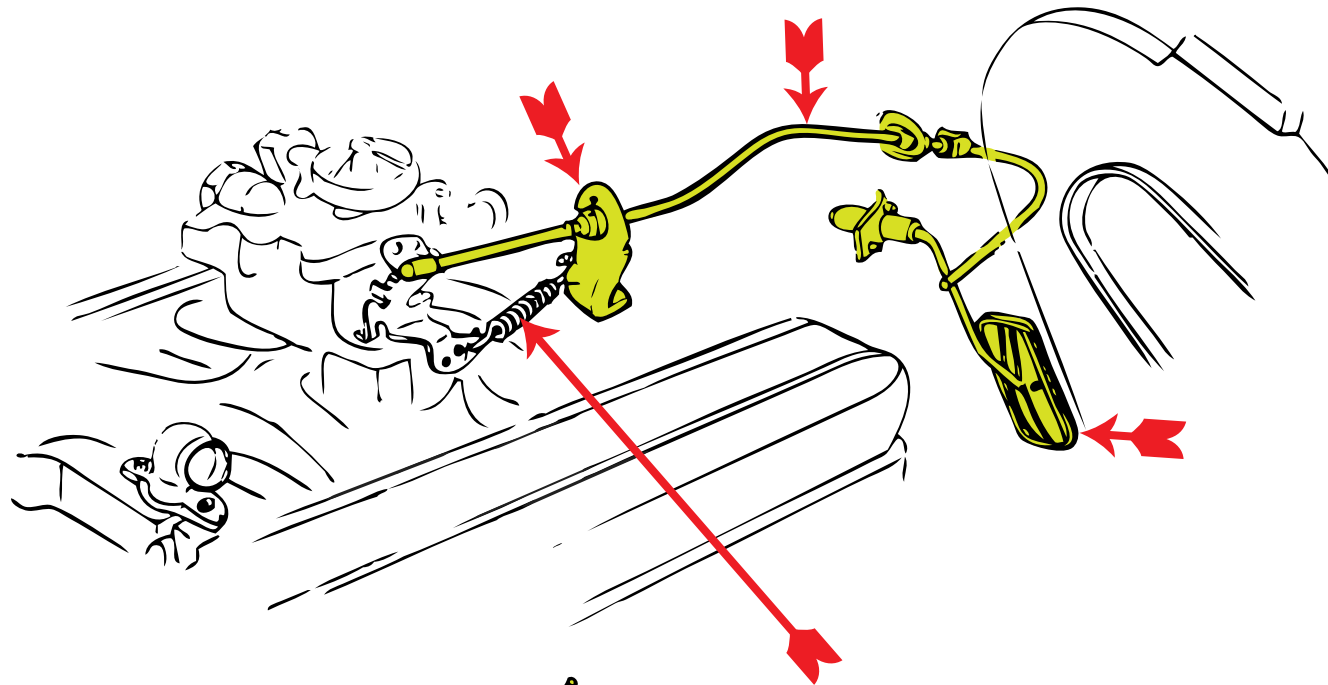


Click the links for related parts

CAUTION Care must be taken during installation of retainer onto cable and the proper tooling must be utilized to press the retainer into hole on accelerator pedal rod to assure that cable is not kinked or damaged in any way

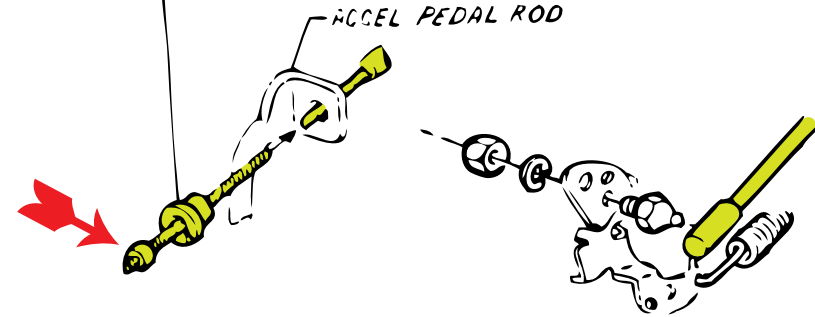

Use 15/64" drill for mounting bolt

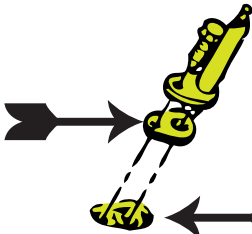

Use 3/8" drill through firewall

