


# The Right Stuff Detailing

---

## 64-72 A Body – w/ Booster

### Brake Line Installation

1. Begin by loosely installing the master cylinder lines into the master cylinder.
2. Hold the brass proportioning valve in position and start the threads of the master cylinder lines.
3. Bolt the bracket into place on the inside of proportioning valve.
4. Tighten the fittings down after you install the bracket.

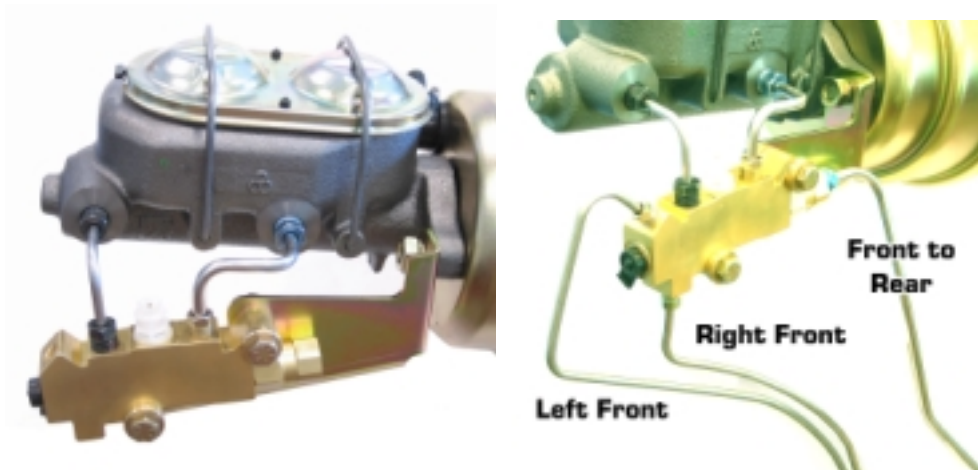

**Note:** Some master cylinder lines have loops in them. They are interchangeable with the straight lines pictured above.

5. Install the remaining lines as pictured above.

