


The Right Stuff Detailing

64-72 A Body – No Booster

Brake Line Installation

1. Begin by loosely installing the master cylinder lines into the master cylinder.
2. Hold the brass proportioning valve in position and start the threads of the master cylinder lines.
3. Bolt the bracket into place on the inside of proportioning valve.
4. Tighten the fittings down after you install the bracket.

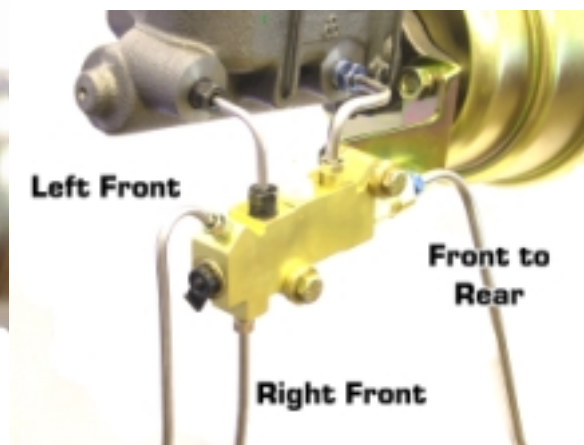

Note: Some master cylinder lines have loops in them. They are interchangeable with the straight lines pictured above.

Note: The booster in these photos was used for mock-up purposes. These instructions are for cars w/o power boosters.

5. Install the remaining lines as pictured above.

